


# How to make a stabilized ortho-silicic acid solution with only 3 inputs

In a previous post, which you can [read here](#), I gave a procedure for the preparation of a stabilized mono-silicic acid using from potassium silicate. The procedure called for the usage of several stabilizing agents, including carnitine and propylene glycol, with phosphoric acid being used as the acidifying agent.

After trying this synthesis myself and talking with other people who tried this process, it seemed clear that the success rate was low and that the process was just too complicated and imprecise for most people to carry out (especially for the patience needed for the addition of the solid potassium silicate). There is a detailed discussion about this procedure, as well as mono-silicic acid synthesis in [this forum thread](#).

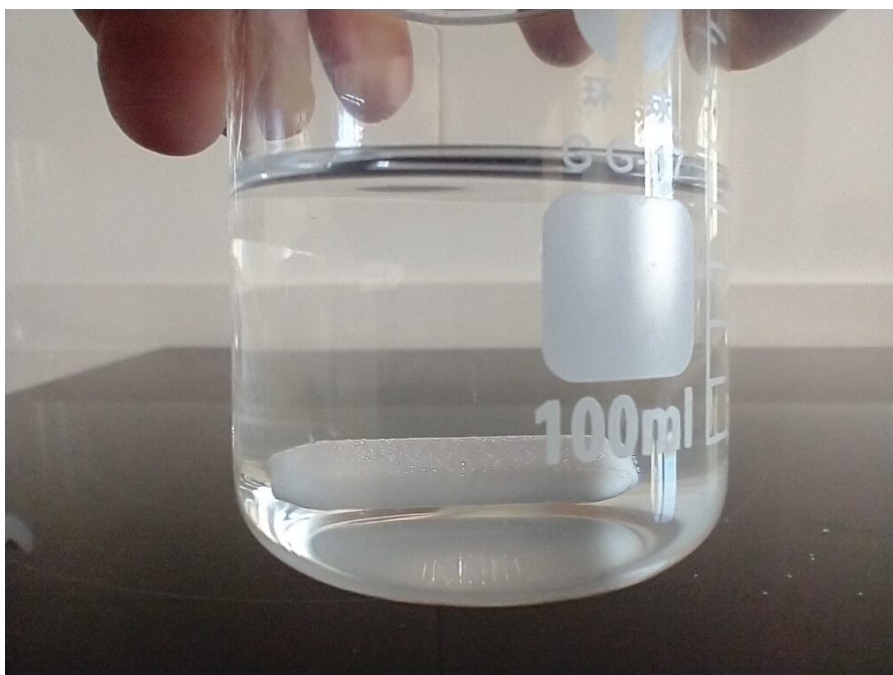

Stabilized mono-silicic acid solution created using the procedure below. Note that mono-silicic acid and ortho-silicic

acid are the exact same thing, they are two names for the same molecule ( $H_4SiO_4$ ). Another molecule with the same nomenclature is ortho-phosphoric acid ( $H_3PO_4$ ), which is also called mono-phosphoric acid.

Given these issues, I decided to look for a potentially easier synthesis starting from cheaper, more readily available materials, avoiding the use of Propylene Glycol (which concerned some people) and trying to simplify the steps involved.

The procedure I came up with simplifies the process by relying on the interaction of silicic acid with sorbitol as a stabilizing agent. This stabilization process is well documented in the literature (see [here](#)) and is caused by the formation of highly stable polyolate complexes between mono-silicic acid and molecules like sorbitol. These complexes form because molecules like sorbitol have adjacent hydroxy groups in what we call a *threo* configuration. These do not exist in sugars like glucose or sucrose, reason why these do not work for this process.

The raw inputs you will need are as followed

1. A potassium silicate with a high K/Si ratio, such as [AgSil 16H](#). You can also use a liquid potassium silicate, such as [Grotek Pro-silicate](#).
2. Sulfuric Acid (>90%)
3. [Sorbitol](#)
4. Distilled water.

If using AgSil16H follow this process first. In a 1000mL beaker, add 70g of AgSil16H and 450mL of distilled water. Stir – ideally with magnetic stirring – until the silicate has all dissolved. This will be the silicate solution.

This is now the procedure to prepare the stabilized ortho-silicic acid solution (700mL):

1. In a 1000mL beaker, add 500mL of distilled water and a

magnetic stirrer.

2. Weigh 200g of Sorbitol and add them to the water.
3. Start the magnetic stirring.
4. After the sorbitol has completely dissolved, during a period of 30 seconds add 100mL of the silicate solution (either as prepared above or a commercial silicate equivalent to the Grotek suggestions above (around 7.5% Si as SiO<sub>2</sub>)).
5. Stir the silicate and sorbitol solution for 10 minutes.
6. Add 10mL of >90% sulfuric acid and stir for 5 minutes. The pH should now be lower than 2.
7. The solution can now be stored.

The above process creates a stable mono-silicic acid solution that has an Si concentration of around 1% of Si as SiO<sub>2</sub> and around 0.6% K as K<sub>2</sub>O. **Used at 8mL gal it should provide around 20ppm of Si As SiO<sub>2</sub> and 10 ppm of K.**

*A previous version of this procedure used 50mL of 80-85% phosphoric acid. However, phosphoric acid seems to generate solutions that are unstable after 1-2 weeks of preparation. Solutions prepared per the above process have been confirmed to be stable for at least 1 month.*

**Did you try it? How were your results? Let us know in the comments below!**